
Slab ASE 01 Inputs: 10 0.35 0.25 1.82 1.6 0.08 100000	slab length (cm) slab height (cm) slab thickness (cm) slab refractive index parasitic coating index specific gain (nepers/cm) number of rays to launch	More than 1000 parasti Mays from	ic formal	Difference sur
Outroutes			0.4	is the firm in the
Outputs: 0.08	maximum gain (nepers/cm)		الم المعالم الم	and and we
-21.9501	minimum gain (nepers/cm)		of of to c	Mary was
			all one self of the	all the
		آگل ۱۰ م	للممير ببدكتين	سلعا
	× ·	الا من المن المن المن المن المن المن الم	I I do	
	1 .	Ti sturge	The way	
	أسي			
	25MM	/		
		3		~ 0
	3.5mm	200	T-Z)a Ru	ne of
	10	c m	barr	et mode
			Bars	15 to 1
				Luz .
			exu	ts.
			1	
			For n	< 7mg2-1/2/21.
			4:	1 -
			Thus cas	1 66
	•		R Zero	loss itic mod
.	Pariti M. Oa.		Janes	: t: 0
I'm	1000	0		THE MOOR
_	have the			
Ave	rage distances blew	reen striker	•	
ou	too and hallow	4 3 E		
	is present the com	2 3.3mm =	8.75mm	
4 0	Paraitie Mode: rage distance, bleu top and battom	• 4		
noe	rage distance tra	welled betw	een etraes	
on	lift and rught	eiler a 2	- 5 mm	
	rage distance tra		- 6,2	25 MM
A٠	erage Oit	L 00 -	1	
~#	- Jo	T avelled	between	_
81	ruses on slal	- ende ~	10 am	
	ribes on slal		.82=	12. ccm

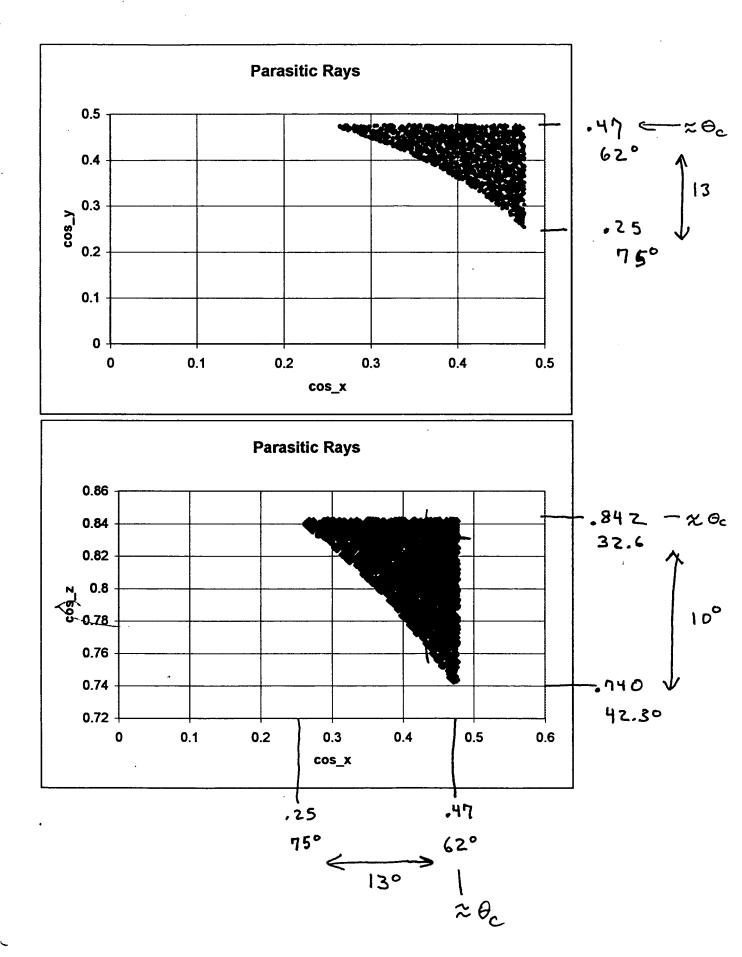

```
modulet - 1
Dim GainDistribution (1000)
Const 'pi As' Double = 3.141592654
Sub Main()
' Main Macro
' Macro recorded 9/6/97 by Raymond J. Beach
 Keyboard Shortcut: Ctrl+u
'Get input parameters
    Worksheets ("sheet1"). Select
    Range("length").Select: SlabLength = ActiveCell.Value
    Range("height").Select: SlabHeight = ActiveCell.Value
    Range("thickness").Select: SlabThickness = ActiveCell.Value
    Range("slabindex").Select: SlabIndex = ActiveCell.Value
    Range("coatingindex").Select: CoatingIndex = ActiveCell.Value
    Range ("specificgain"). Select: SpecificGain = ActiveCell. Value
    Range("numberofrays").Select: NumberOfRays = ActiveCell.Value
'Define other parameters
    NumberOfParasiticDirections = 0
    Nbins = 100
    MaxGain = SpecificGain
    Range("maximumgain").Select: ActiveCell.Value = MaxGain
    RelativeIndex = SlabIndex / CoatingIndex
    If SlabHeight < SlabThickness Then
        MinGain = 2 * Log((RelativeIndex - 1) / (RelativeIndex + 1)) / SlabHeight
        MinGain = 2 * Log((RelativeIndex - 1) / (RelativeIndex + 1)) / SlabThickness
    End If
    Range("minimumgain").Select: ActiveCell.Value = MinGain
'Initialize the random number generator
    Randomize
'Start the launch cycle
For i = 1 To NumberOfRays
'Define a random launch direction in (+,+,+) quadrant using direction cosines to define the direc
tion
    Phi = (pi / 2) * Rnd
    Theta = (pi / 2) * Rnd
'x is the slab height direction
'y is the slab thickness direction
'z is the slab length direction
    cx = Sin(Theta) * Cos(Phi)
                                'direction cos in x-direction
    cy = Sin(Theta) * Sin(Phi)
                                'direction cos in y-direction
    cz = Cos(Theta)
                                 'direction cos in z-direction
'Define unpolarized Fresnel reflection coefficients for three different planes that generate ima
ge space
    'x-plane calculation
    Theta1 = ArcCos(cx)
    Temp = SlabIndex * Sin(Theta1) / CoatingIndex
    If Abs(Temp) > 1 Then
        Refx = 1
    Else
        Theta2 = ArcSin(Temp)
        Refx = ((Sin(Thetal - Theta2) / Sin(Thetal + Theta2)) ^ 2 + (Tan(Thetal - Theta2) / Tan(
Theta1 + Theta2)) ^ 2) / 2
    End If
    'y-plane Calculation
    Thetal = ArcCos(cy)
    Temp = SlabIndex * Sin(Theta1) / CoatingIndex
    If Abs(Temp) > 1 Then
```

```
MODULET - 7
        Refy = 1
    Eïse
        Theta2 = ArcSin(Temp)
        Refy = ((Sin(Thetal - Theta2) / Sin(Thetal + Theta2)) ^ 2 + (Tan(Thetal - Theta2) / Tan(
Theta1 + Theta2)) ^ 2) / 2
    End If
     'z-plane calculation
    Thetal = ArcCos(cz)
    Temp = SlabIndex * Sin(Theta1)
    If Abs(Temp) > 1 Then
        Refz = 1
    Else
        Theta2 = ArcSin(Temp)
        Refz = ((Sin(Thetal - Theta2) / Sin(Thetal + Theta2)) ^ 2 + (Tan(Thetal - Theta2) / Tan(
Theta1 + Theta2)) ^ 2) / 2
    End If
 'Calculate the loss per cm in nepers/cm due to x, y, and z reflections
    Nepersx = cx * Log(Refx) / SlabHeight
    Nepersy = cy * Log(Refy) / SlabThickness
    Nepersz = cz * Log(Refz) / SlabLength
 'Calculate the net gain-loss in nepers/cm seen by this ray
    Nepers = SpecificGain + Nepersx + Nepersy + Nepersz
 'Bin this launch
    BinNumber = Nbins * (Nepers - MinGain) / (MaxGain - MinGain)
    If BinNumber < 0 Then BinNumber = 0
    GainDistribution(BinNumber) = GainDistribution(BinNumber) + 1
    If Nepers > 0 Then
        Beep
        NumberOfParasiticDirections = NumberOfParasiticDirections + 1
        Worksheets("sheet2").Cells(1 + NumberOfParasiticDirections, 1).Value = cx
        Worksheets("sheet2").Cells(1 + NumberOfParasiticDirections, 2).Value = cy
        Worksheets("sheet2").Cells(1 + NumberOfParasiticDirections, 3).Value = cz
        Worksheets("sheet2").Cells(1 + NumberOfParasiticDirections, 4).Value = Refx
        Worksheets("sheet2").Cells(1 + NumberOfParasiticDirections, 5).Value = Refy
        Worksheets("sheet2").Cells(1 + NumberOfParasiticDirections, 6).Value = Refz
        Check = Sqr(cx ^2 + cy ^2 + cz ^2)
     End If
Next i
End Sub
Function ArcCos(C)
 'Returns the Arc Cos of C.
    If C = 0 Then
        ArcCos = pi / 2
    Else
        ArcCos = Atn(Sqr(1 - C ^ 2) / C)
    End If
End Function
Function ArcSin(S)
 'Returns the Arc Sin of S
    If S = 1 Then
        ArcSin = pi / 2
        ArcSin = Atn(S / Sqr(1 - S^2))
    End If
End Function
```